

4K IP VIDEO DECODER NVD-45

Instruction Manual

Contents

FCC COMPLIANCE STATEMENT	4
WARNINGS AND PRECAUTIONS	4
WARRANTY	5
STANDARD WARRANTY.....	5
FIVE YEAR WARRANTY	5
DISPOSAL.....	6
PRODUCT OVERVIEW.....	7
FEATURES	7
FRONT PANEL	9
REAR PANEL.....	9
HOW TO FIND THE NVD-45 ON AN IP NETWORK	11
HOW TO USE THE NVD-45 IP FINDER UTILITY SOFTWARE	11
NVD-45 LOGIN USING A WEB BROWSER	12
DEFAULT LOGIN DETAILS	12
NVD-45 WEB BROWSER HOME PAGE	13
SETTINGS OPTION.....	13
SETTINGS > AUDIO SETUP	13
SETTINGS > DISPLAY SETUP	14
SETTINGS > NETWORK SETUP	15
SETTINGS > LIVE STREAM SETUP	17
DECODING VIDEO FROM THE NVS-33/34/35/40 ENCODERS.....	19
DECODING AN RTMP PUSH STREAM	20
DECODING OTHER STREAM TYPES.....	20
DECODING FROM A VIDEO SHARING WEBSITE	20
SETTINGS > ACCOUNT SETUP	21
SETTINGS > STB MODE.....	22

RMC-12 IR REMOTE.....	23
SETTINGS > PLUGINS.....	24
SETTINGS > CLOUD	24
CONNECT THE NVD-45 TO DV CLOUD.....	25
CONTROL VIA DV CLOUD.....	26
LINK TO A LIVE CHANNEL ON DV CLOUD.....	27
AUTOMATIC FIRMWARE UPDATES	30
DATAVIDEO NVD-45 SOCKET COMMANDS	31
PORT FORWARDING ON YOUR FIREWALL / ROUTER.....	32
DIMENSIONS	33
SPECIFICATIONS	34
SERVICE & SUPPORT	36

Disclaimer of Product & Services

The information offered in this instruction manual is intended as a guide only. At all times, Datavideo Technologies will try to give correct, complete and suitable information. However, Datavideo Technologies cannot exclude that some information in this manual, from time to time, may not be correct or may be incomplete. This manual may contain typing errors, omissions or incorrect information. Datavideo Technologies always recommend that you double check the information in this document for accuracy before making any purchase decision or using the product. Datavideo Technologies is not responsible for any omissions or errors, or for any subsequent loss or damage caused by using the information contained within this manual. Further advice on the content of this manual or on the product can be obtained by contacting your local Datavideo Office or dealer.

FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warnings and Precautions

1. Read all of these warnings and save them for later reference.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this unit from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this unit in or near water.
5. Do not place this unit on an unstable cart, stand, or table. The unit may fall, causing serious damage.
6. Slots and openings on the cabinet top, back, and bottom are provided for ventilation. To ensure safe and reliable operation of this unit, and to protect it from overheating, do not block or cover these openings. Do not place this unit on a bed, sofa, rug, or similar surface, as the ventilation openings on the bottom of the cabinet will be blocked. This unit should never be placed near or over a heat register or radiator. This unit should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should only be operated from the type of power source indicated on the marking label of the AC adapter. If you are not sure of the type of power available, consult your Datavideo dealer or your local power company.
8. Do not allow anything to rest on the power cord. Do not locate this unit where the power cord will be walked on, rolled over, or otherwise stressed.
9. If an extension cord must be used with this unit, make sure that the total of the ampere ratings on the products plugged into the extension cord do not exceed the extension cord's rating.
10. Make sure that the total amperes of all the units that are plugged into a single wall outlet do not exceed 15 amperes.
11. Never push objects of any kind into this unit through the cabinet ventilation slots, as they may touch dangerous voltage points or short out parts that could result in risk of fire or electric shock. Never spill liquid of any kind onto or into this unit.
12. Except as specifically explained elsewhere in this manual, do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltage points or other risks, and will void your warranty. Refer all service issues to qualified service personnel.
13. Unplug this product from the wall outlet and refer to qualified service personnel under the following conditions:
 - a. When the power cord is damaged or frayed;
 - b. When liquid has spilled into the unit;
 - c. When the product has been exposed to rain or water;

- d. When the product does not operate normally under normal operating conditions. Adjust only those controls that are covered by the operating instructions in this manual; improper adjustment of other controls may result in damage to the unit and may often require extensive work by a qualified technician to restore the unit to normal operation;
- e. When the product has been dropped or the cabinet has been damaged;
- f. When the product exhibits a distinct change in performance, indicating a need for service.

Warranty

Standard Warranty

- Datavideo equipment is guaranteed against manufacturing defects for **one (1) year** from the date of purchase.
- A valid purchase invoice or other proof of purchase must be provided when requesting warranty service.
- The warranty period begins on the actual purchase date. If the purchase date cannot be verified, the warranty period will begin **thirty (30) days after shipment** from a Datavideo office.
- Non-Datavideo branded products (products without the Datavideo logo) are covered by a **one-year warranty** from the date of purchase.
- Damage caused by accident, misuse, unauthorized repair, or exposure to sand, grit, or water is **not covered** under warranty.
- Virus or malware infections on computer systems are **not covered** under warranty.
- Any issues caused by unauthorized third-party software installations that are not required by Datavideo systems are **not covered** under warranty.
- All shipping, mailing, or transportation costs, including insurance, are the responsibility of the owner unless otherwise stated.
- **Teleprompter glass is not covered** under warranty.
- Accessories, including **headphones, cables, batteries, metal parts, housings, protective cases, cable reels, and consumable items**, are **not covered** under warranty.
- Warranty is valid only in the country or region of purchase.
- All other claims **not explicitly stated** are not covered.
- Your statutory rights remain unaffected.

Five Year Warranty

- Starting January 1, 2026, all Datavideo products that are successfully registered on the Datavideo official website are eligible for a **free four-year extended warranty**, in addition to the standard one-year warranty, for a total of **five years of coverage**.



- **Only registrations completed through the Datavideo official website qualify** for the five-year warranty. Registrations completed through local Datavideo offices, resellers, or authorized distributors **are not eligible**.
- Certain parts with limited service life — including **LCD panels, DVD drives, hard drives, solid-state drives, SD cards, USB thumb drives, lighting equipment, non-PCIe cards, and third-party PC components** — are covered by a **one-year warranty only** and are **not eligible** for the extended warranty.
- **Camera modules** are covered by a **three-year warranty from the date of purchase**.

Disposal



For EU Customers only - WEEE Marking

This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and

recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



CE Marking is the symbol as shown on the left of this page. The letters "CE" are the abbreviation of French phrase "Conformité Européenne" which literally means "European Conformity". The term initially used was "EC Mark" and it was officially replaced by "CE Marking" in the Directive 93/68/EEC in 1993. "CE Marking" is now used in all EU official documents.

Product Overview

The Datavideo NVD-45 is a wired IP video decoder with SDI, Composite and analogue audio outputs.

The NVD-45 decodes all common protocols including SRT, RTSP, RTMP, UDP, TCP, HTTP, HLS and MPEG-TS and can output 4K video at resolutions up to 3840x2160p60.

Decodes directly from YouTube Live, UStream and most major CDNs without any 3rd party advertising.

The NVD-45 is the perfect partner to the Datavideo NVS-33/34/35/40 IP encoders allowing full HD point to point video links over Ethernet, WiFi or the Internet.

When connected to dv Cloud (<https://www.dvcloud.tv/>) the NVD-45 is controllable from anywhere in the world and can be easily connected to any encoder via the cloud.



When connected to a Datavideo DVS-200 server or dv Cloud, the NVD-45 can function as an IPTV set top box downloading a channel list of both live and pre-recorded streams automatically.

Features

- Operates on standard 10/100Mb Ethernet networks
- Excellent image quality with very low delay
- Unicast and multicast support
- Supports RTSP (Unicast/Multicast), RTMP, UDP (Unicast/Multicast), TCP, HTTP, HLS and MPEG-TS
- Supports SRT listener mode
- Built in RTMP server for point to multipoint distribution
- Direct decoding from most major CDNs without any 3rd party advertising

- Remote control via dv Cloud
- Channel list download from DVS-200 Cloud Streaming Server
- Feature-rich WebUI for configuration and control
- Built in video scaler
- Supports 4K video and audio
- Supports simultaneous digital embedded and analogue audio output
- Supports remote control by socket commands
- Small form factor, rack mountable using RMK-1
- Supports SDI and Composite video output

Front Panel

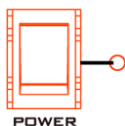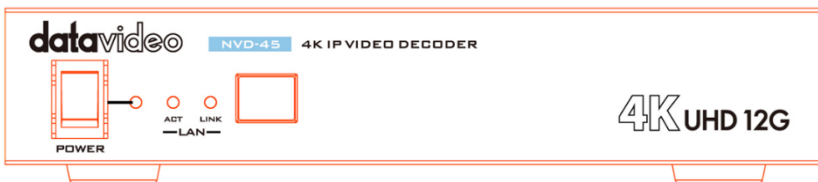

Power On/Off Switch

Switches the power On / Off

Power LED: The red power LED indicates that the NVD-45 has an active power supply.

 



LAN Status LED

ACT LED: The flashing yellow ACT LED indicates LAN activity (data upload and download).


LINK LED: The green LINK LED indicates active LAN link.

Rear Panel

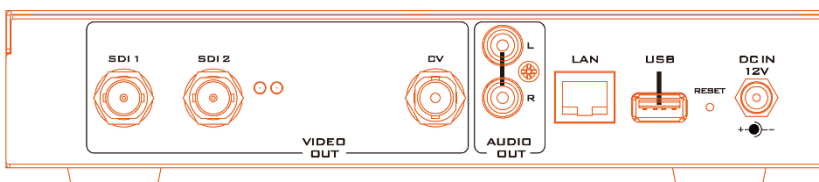

AUDIO OUT (RCA)

RCA stereo for a line level analogue audio.

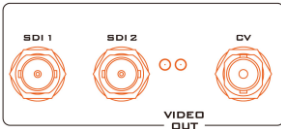

SDI OUT 1/2

SDI digital video output connectors

Left LED: When ON, the SDI ports are transmitting along with power.

Right LED: When ON, the SDI ports are transmitting video.

CVBS OUT (BNC)

Composite video output



Ethernet Port (RJ-45)

10/100M base Ethernet Network interface



DC In Socket

Connect the supplied 12V PSU to this socket. The connection can be secured by screwing the outer fastening ring of the DC In plug to the socket.



Reset Button

Press and hold for at least 5 seconds to reset the device to its factory default settings (including the password).



USB

Functions currently under development.


How to find the NVD-45 on an IP network

By default, once the physical connections have been established, the **NVD-45 will try to obtain an IP Address from a DHCP network server**. As we will see this can be changed later to a Static IP address if required.

How to use the NVD-45 IP Finder Utility Software

Datavideo supply a free, *Windows based* utility, called **NVD & NVP IP Finder**. The utility is also available for download on the product page of the official website.

The first time this software is used on the computer you may need to allow it permission through your computers firewall / anti-virus software in order for it to be able to scan or search the local network.

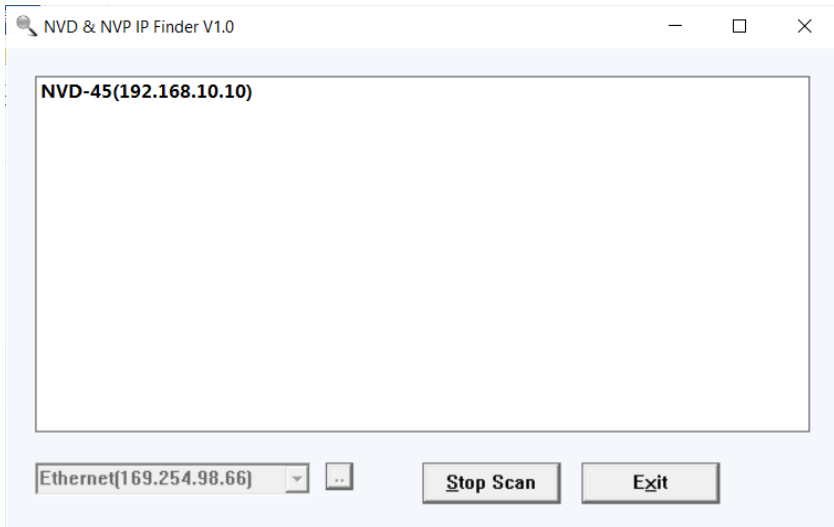

When the utility scans the LAN that the computer is connected to, it displays the current IP address for any NVD-45 units found on this local IP network. Double clicking on the device listed will automatically open your computers default web browser and navigate to the login page of the NVD-45.

If you are using an Apple computer then you can use an alternative utility app such as Fing or Network Analyzer Lite.

NVD-45 Login using a Web Browser

Type the numbers of the IP address for the NVD-45 into the search bar of the browser. Remember to include the dots in between the numbers. When entered you will then be asked to login to the NVD-45.

Alternatively you can simply double click the IP address listed in the NVD-45 IP finder.

A login form for the NVD-45 device. It features a blue header bar with the text "Enter Your Login Credentials". Below the header, there is a section titled "Login User" with a text input field labeled "Username". Underneath that is a section titled "User Password" with a text input field labeled "Password". At the bottom of the form is a blue button labeled "Login".

Enter Your Login Credentials

Login User

Username

User Password

Password

Login

Default Login Details

All NVD-45 units are delivered from the factory with the same default user name and password. This can be changed at a later stage to suit your needs.

User = admin **Password** = 000000 [Zero six times]

Please Note: We recommend Google Chrome or Mozilla Firefox web browsers.

NVD-45 Web Browser Home Page



Welcome to NVD-45 Web Server!

Please click on the Settings menu to configure the decoder for the first time.

By default this device will output via the SDI interface with embedded audio, for optimal performance please set the output resolution and frame rate to match the source video.




Once we have logged into the NVD-45 we are presented with the **Home** page.

Settings option

When clicked, the Settings option tab will open a new page. There are eight sections of settings which can be looked at. These are: **Audio Setup**, **Display Setup**, **Network Setup**, **Live Stream Setup**, **Cloud** and **Account Setup**, **STB Mode** and **Plugins**.

Settings > Audio Setup

By default, the NVD-45 will output audio over the digital SDI connection. Alternatively, you can choose to output the analogue audio via the RCA connections.

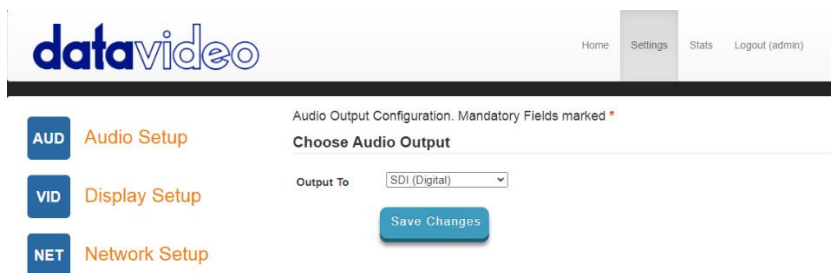

Settings > Display Setup

By default the NVD-45 will output video over the digital SDI port at a resolution of 2160P 50 fps and RGB colourspace.

Please note: The set resolution is only applied when the stream is decoding, the device will output your monitor's preferred resolution as it boots.

The screenshot shows the 'Settings > Display Setup' page. On the left is a sidebar with navigation links: AUD Audio Setup, VID Display Setup (highlighted), NET Network Setup, LIVE Live Stream Setup, CLD Cloud, and A/C Account Setup. The main content area is titled 'Display Configuration' and contains a warning: 'Warning, not all resolutions will work on your display'. Below this is a 'Choose Output' section with 'Output To' set to 'SDI (Digital)' and 'Rotate / Flip' set to 'Off'. The 'SDI' section shows 'Screen Resolution' set to '2160p 50 (64:27)' and 'SDI Colourspace' set to 'RGB'. A 'Save Changes' button is at the bottom right.

Output To

Here you can select to output video digitally over SDI or over the SD analogue composite connection.

SDI (Digital)

When digital is selected you can select a screen resolution from SD PAL/NTSC right up to DCI4K30. The NVD-45 will scale your source video to match the output resolution however the aspect ratio (4:3 or 16:9) should be matched to avoid black space on the output. For optimal performance match the output resolution to the source video. The colour space can be switched between YUV (YCbCr) and RGB, most video equipment will use the YUV colour space however if the colors appear wrong on your display please try RGB.

Composite (Analogue)

When analogue is selected the UI will change and you can only select between PAL and NTSC resolution with a 4:3 or 16:9 aspect ratio.

datavideo

HomeSettingsStatsLogout (admin)

AUDAudio Setup

VIDDisplay Setup

NETNetwork Setup

LIVELive Stream Setup

CLDCloud

A/CAccount Setup

Display Configuration

Warning , not all resolutions will work on your display

Choose Output

Output ToComposite (Analog)

Rotate / FlipOff

Composite

CompositeNTSC

Mode

Aspect Ratio16:9

Save Changes

Rotate / Flip
Provides the option to rotate or flip (mirror) the video output, default is off.

Settings > Network Setup

datavideo

HomeSettingsStatsLogout (admin)

AUDAudio Setup

VIDDisplay Setup

NETNetwork Setup

LIVELive Stream Setup

CLDCloud

A/CAccount Setup

STBSTB Mode

PLUPlugins

Network Configuration. Mandatory Fields marked *

IPv4 Configuration

Network Type

Automatic Configuration(DHCP)

Static Configuration

Proxy

HTTP(S) Proxyhttp://your.ip.port/

Time

NTP

Leave blank for defaults

Servers(comma separated)

Security

Enable Telnet

Commands

Save Changes

By default the NVD-45 will obtain its IP address automatically from a DHCP server.

15

If you intend to connect the NVD-45 directly to a PC or network without a DHCP server then you should assign a manually set IP address by selecting 'Static Configuration'.

We recommend that only advanced users who are aware of IP addressing set the manual 'Static Configuration' IP address. Your local network administrator or I.T. support may be able to help you with this.

Proxy

Here you can set the NVD-45 to connect to the internet via a proxy server. Proxy server is also a way to bypass a firewall if there is one. Simply enter the proxy IP and the port number as depicted below.

Proxy

HTTP(S) Proxy

Time

By default, the NVD-45 will synchronize its internal clock with public NTP servers, if your network does not allow connections to external servers you can specify your internal NTP servers here. It is important the internal clock is correct for secure HTTPS:// stream sources to work.

Time

NTP

**Servers(comma
separated)**

Security

Here you can enable the internal telnet server, this is used so that the NVD-45 can be controlled by third party applications using socket commands. Please see the socket commands section of this manual for more information.

Security

Enable Telnet

☐

Commands

Settings > Live Stream Setup

From this page you can configure the source stream for the decoder. The NVD-45 supports the following stream types:

- RTSP over UDP (Unicast / Multicast)
- RTSP over TCP
- RTSP over HTTP
- SRT (Secure Reliable Transport) caller
- MPEG-TS over UDP
- RTMP Pull
- RTMP Push (Internal Server)
- UDP raw (Unicast/Multicast)
- HLS over HTTP
- MPEG-TS over TCP Pull

datavideo

Home

Settings

Stats

Logout (admin)

AUD

Audio Setup

VID

Display Setup

NET

Network Setup

LIVE

Live Stream Setup

CLD

Cloud

Stream Configuration.

SRT, RTSP, RTP, UDP, RTMP and TCP streams are supported

Choose Input Stream

Decoder Mode

Default

Input Stream

rtmp://ns8.indexforce.com/home/mystream

Buffer Size

0.30 s

Save Changes

Decoder Mode

Default mode should be used for decoding standard streams from encoders such as SRT, RTSP, RTMP, HTTP etc.

Selecting the **RTMP Server (Internal)** mode automatically generates an RTMP

URL and a stream key which should be entered into the corresponding fields on Datavideo NVS devices or any other video streaming encoders.

The RTMP playback URL can be used to distribute the stream to multiple other decoders, the number of concurrent RTMP clients is limited only by the 100Mbps Ethernet port.

Video Sharing & HLS mode should be used for decoding videos from video sharing websites, such as:

- Dailymotion
- Livestream
- Twitch
- UStream
- YouTube Live

Note: To decode YouTube Live streams, the **YouTube plugin must first be downloaded from the product page on the Datavideo official website and uploaded** via the **Plugins Page** → **Upload Plugins**. **Do not unzip the downloaded plugin.** Upload the file exactly as provided.

Please check the product page on the datavideo.info website for a full list of supported video sharing websites.

This mode also supports HLS streams. Unlike **Default** mode, you can select the resolution of the stream you wish to decode if the HLS stream contains multiple variants.

Input Stream

Enter the URL for the source stream here

Example for **Default** mode:

rtsp://192.168.1.50/stream1
rtmp://192.168.1.50/live/stream1
srt://192.168.1.50:9000

Example for **Video Sharing & HLS** mode:

<https://www.youtube.com/watch?v=y60wDzZt8yg>

Example for **RTMP server mode**:

rtmp://192.168.2.16:1935/stream/stream

Buffer Size

This determines how much video is buffered before playback starts, the default 0.3 seconds should be suitable for streaming over Ethernet but a larger buffer

may be required in environments with poor network stability to achieve smooth video when streaming over the internet or WiFi. If you notice the video stuttering or the audio breaking up you should increase the buffer size.

Note: You might experience long delay if the buffer size is too big.

RTSP protocol

Only displayed if a RTSP stream is being used, the transport protocol can be manually specified.

SRT Latency

Only displayed if a SRT stream is being used. Secure Reliable Transport (SRT) achieves high-quality, low latency streaming across unreliable Internet connections via UDP packets. If packets are lost in transit to the NVD-45, a request to retransmit the lost packets is sent back to encoder. You can adjust the latency to improve the Quality of Service (QoS) of the stream and reduce the number of dropped packets. You can add from 20 ms to 8000 ms of latency to the SRT stream. Increasing latency gives more time to buffer packets and resend any that got lost in transit to the destination. If the latency value set for the stream is too low and there is packet loss over the network, retransmission of lost packets will not be possible, and the stream quality will suffer.

SRT Passphrase

If the SRT stream is encrypted, you must enter the passphrase here to decode the stream.

Decoding video from the NVS-33/34/35/40 encoders

To decode video from the NVS the NVD-45 must be on the same local network (Ethernet/WiFi) or be able to access the NVS stream over the internet.

When the NVS is in RTSP TCP/UDP mode

Simply copy the RTSP URL from the 'Live' tab of the NVS and enter it into the 'Input Stream' field on the NVD-45. When streaming over LAN it is recommended to set the NVS in RTSP (TCP/UDP) mode.

When the NVS is in RTMP mode Local server mode

Simply copy the RTMP URL from the 'Live' tab of the NVS and enter it into the 'Input Stream' field on the NVD-45

When the NVS-33/34/35/40 are in HLS mode

Simply copy the HLS URL from the 'Live' tab of the NVS and enter it into the 'Input Stream' field on the NVD-45

Please Note: When in HLS mode, the buffer size should be set to 1.0 seconds

or higher, if you notice audio artifacts you should increase the buffer size.

Decoding an RTMP push stream

To decode an RTMP push stream, first set the decoder mode to RTMP Server (Internal) which should automatically generate an RTMP URL and a stream key. Simply enter the RTMP URL and stream key into the corresponding fields on Datavideo NVS devices or any other video streaming encoders.

The screenshot shows the Datavideo NVD-45 web interface. The top navigation bar includes the 'datavideo' logo and links for Home, Settings (active), Stats, and Logout (admin). On the left sidebar, there are menu items for AUD (Audio Setup), VID (Display Setup), NET (Network Setup), LIVE (Live Stream Setup), CLD (Cloud), and A/C (Account Setup). The main content area is titled 'Stream Configuration' and contains the following fields:

- RTMP URL:** rtmp://192.168.10.10:1935/stream
- Key:** stream
- Playback URL:** rtmp://192.168.10.10:1935/stream/stream
- Choose Input Stream:** A section with a dropdown menu set to 'RTMP Server(internal)'.
- Input Stream:** rtmp://192.168.10.10:1935/stream/stream
- Buffer Size:** 0.30 s
- RTMP Key:** stream
- Save Changes:** A blue button at the bottom right of the configuration area.

Decoding other stream types

To decode other stream types such as UDP multicast or TCP, simply enter the stream URL into the 'Input Stream' field of the NVD-45.

Listening for a Pushed UDP Stream

To listen for a pushed UDP stream, enter the following URL into the 'Input Stream' field of the NVD-45.

udp://@:9710

Replace 9710 with the port number of the pushed stream.

Decoding from a video sharing website

First you must set the decoder mode to 'Video Sharing', then simply copy the URL from your web browser into the 'Stream URL' field on the NVD-45.

For example:

<https://www.youtube.com/watch?v=y60wDzZt8yg>

Optionally you can select the preferred stream resolution.

Preferred	HD (1080p or lower) ▼
Stream	SD (240p or lower)
	SD (360p or lower)
	SD (480p or lower)
	HD (720p or lower)
	HD (1080p or lower)

Settings > Account Setup

The NVD-45 has one admin user account and password. This account is used to keep the NVD-45 secure and gives access to the streaming settings.

Default user name = **admin** Default password = **000000** [Zero six times]

This section describes how to change the default username and password shown above to something new which is more secure.

The screenshot shows the datavideo web interface. At the top, there's a navigation bar with 'Home', 'Settings' (highlighted), 'Stats', and 'Logout (admin)'. Below this is a sidebar with menu items: AUD Audio Setup, VID Display Setup, NET Network Setup, LIVE Live Stream Setup, CLD Cloud, A/C Account Setup (highlighted), STB STB Mode, and PLU Plugins. The main content area is titled 'User Credentials Management' and contains a section for 'Manage User - admin'. This section shows the current user 'admin' and has input fields for 'Password' and 'Confirm Pass.', followed by a 'Change Pass' button.

1. Log in with the NVD-45 server as normal using the computer web browser.
2. Click **Settings**
3. Click **Account Setup**
4. Click admin and then enter the new **user name and password**.
5. Click 'Change Pass'

Please Note: Please be careful and memorize the new login details as the old or default login is deleted during this process.

Settings > STB Mode

The STB mode can only be used along with a Datavideo DVS-200 stream server or dv Cloud please visit <https://www.datavideo.com/> for more information on the DVS-200 and <https://www.dvcloud.tv/> for more information on dv Cloud.

When enabled, the NVD-45 will connect to the DVS-200 or dv Cloud server and download a list of available live and VOD channels, these channels will be displayed on the SDI output. Channels can be selected using the supplied IR remote control.

When used with DVS-200 only HLS streams will be decoded so low latency is not possible in this mode, when used with dv Cloud SRT streams will also be available if low latency is required.

The screenshot shows the Datavideo NVD-45 web interface. At the top, the 'datavideo' logo is on the left, and navigation links for 'Home', 'Settings' (active), 'Stats', and 'Logout (admin)' are on the right. A sidebar on the left contains menu items: AUD Audio Setup, VID Display Setup, NET Network Setup, LIVE Live Stream Setup, CLD Cloud, A/C Account Setup, STB STB Mode (highlighted), and PLU Plugins. The main content area is titled 'STB Configuration.' and 'dv Cloud / DVS-200 STB Mode'. It contains the following fields: 'STB Mode' (a dropdown menu set to 'Enabled'), 'Hostname' (text box with '128.199.120.200'), 'Port' (text box with '80'), 'Username' (text box with 'admin'), 'Password' (text box with masked characters), 'Remove background image' (checkbox, unchecked), and 'Upload background image' (a 'Choose file' button and the text 'No file chosen (16:9)'). A 'Save Changes' button is at the bottom right of the configuration area.

STB Mode

When enabled, the 'Live stream setup' options will be disabled, the NVD-45 will display a channel list on the SDI output and control is only using the **supplied IR remote**.

Please Note: STB Mode is intended for use with SDI output only.

Hostname: Enter the DVS-200 machine's IP

Username: Enter the DVS-200 user accounts you wish to download channels

from, you will only see channels this user account has access to.

Password: Enter the DVS-200 user accounts password

Upload background image

Here you can upload a custom background image, this image is displayed behind the on screen channel list.

Remove background image

Removes the uploaded background image and restores the default.

Once connected you will see the on screen channel list on the SDI output.



RMC-12 IR Remote



The NVD-45 comes supplied with the RMC-12 IR control. Its key definitions are as follows:

Vol + - Increases volume (only active when playing back)

Vol - - Decreases volume (only active when playing back)

CH List – Stops playback and loads the channel list

Play/Pause – Pause and resumes playback (only active when playing back)

Note: In STB mode, you can only pause for as long as the HLS playlist length on DVS-200.

OK – Plays the selected channel

Up – Used for channel list navigation

Down – Used for channel list navigation

Left – Used for channel list navigation and seeking during playback


Right - Used for channel list navigation and seeking during playback

Return – Used to close the channel list and resume playback of the last seen channel

Power – Turn NVD-45 into standby mode

Settings > Plugins

This page allows you to upload a .zip file containing the latest plugins for **Video Sharing & HLS** mode, this function should only be used if you are instructed to do so by a Datavideo support representative.

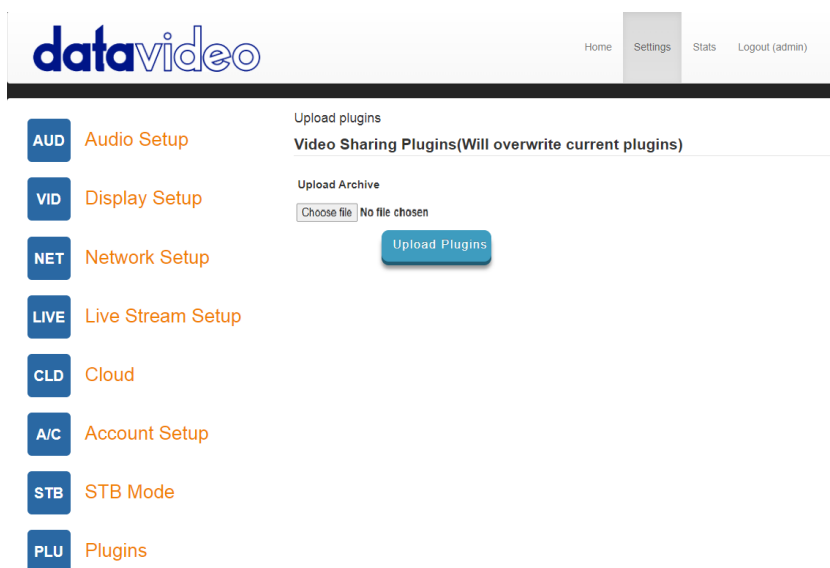

Settings > Cloud

Cloud mode allows the NVD-45 to be connected to dv Cloud (<https://www.dvcloud.tv>) and offers the following features:

- Control the NVD-45 settings from anywhere over the internet
- Monitor the NVD-45 from anywhere over the internet
- Easily link the NVD-45 to encoders via the cloud
- Use SRT (secure reliable transport) for reliable low latency point to point links over the internet

Connect the NVD-45 to dv Cloud

You must have a dv Cloud subscription to use this feature, please visit <https://www.dvcloud.tv/> to sign up.

First enable cloud operation then enter your dv Cloud username (the email address you used when you signed up) and password and click 'Save Changes'

The screenshot shows the DataVideo NVD-45 web interface. On the left is a sidebar with navigation links: AUD Audio Setup, VID Display Setup, NET Network Setup, LIVE Live Stream Setup, CLD Cloud (highlighted), and A/C Account Setup. The main content area is titled 'dvCloud Mode' and 'Configure Cloud Operation'. It includes a message 'Please visit dvcloud.tv for more information' and a 'Cloud' dropdown menu set to 'Enabled'. Below this are input fields for 'dvCloud Username' and 'dvCloud Password', both currently empty. A message at the bottom states 'Failed to find servers or your credentials are invalid!'. A 'Save Changes' button is located at the bottom right of the configuration area.

Next select the dv Cloud server you wish to connect to and optionally give the decoder a name (for example "NVD-45"). If you do not set a device name, NVD-45-1000000032022281 where the decoder's serial number will be used.

dvCloud Mode

Configure Cloud Operation

Please visit dvcloud.tv for more information

Cloud

Enabled ▾

Operation

dvCloud

Username

dvCloud

Password

dvCloud

Servers

Device Name


NVD-45

Save Changes


Click 'Save Changes', the NVD-45 should now be connected to dv cloud.

Control via dv Cloud

Select 'Decoders' from the 'Hardware' menu.

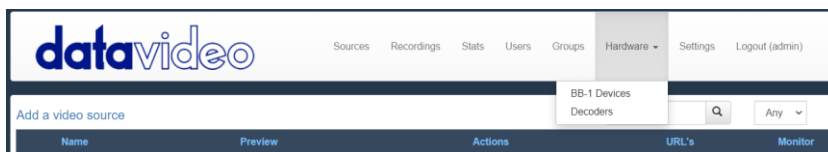


You will see the NVD-45 listed as shown below.

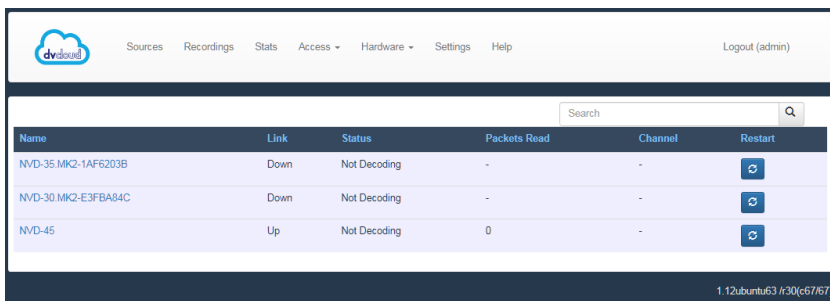

Name	Link	Status	Packets Read	Channel	Restart
NVD-35-MK2-1AF6203B	Down	Not Decoding	-	-	
NVD-30-MK2-E3FBA84C	Down	Not Decoding	-	-	
NVD-45	Up	Not Decoding	0	-	

1.12ubuntu63 /r30(c67/67)

Click the decoder's name to access it settings remotely.

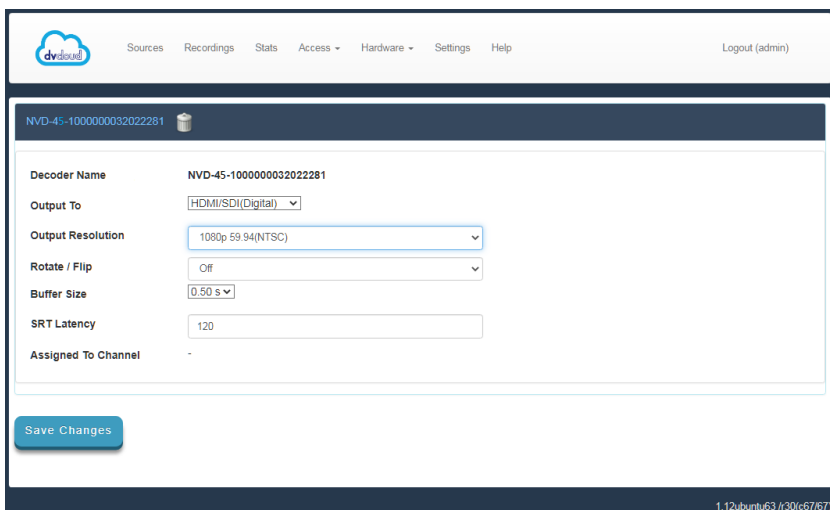

NVD-45-1000000032022281

Decoder Name NVD-45-1000000032022281

Output To

Output Resolution

Rotate / Flip

Buffer Size

SRT Latency


Assigned To Channel -

1.12ubuntu63 /r30(c67/67)


Link to a live channel on dv Cloud

For help setting up your encoder with dv Cloud, please see the separate support material on <https://www.datavideo.info/>.

Click on the video source name.

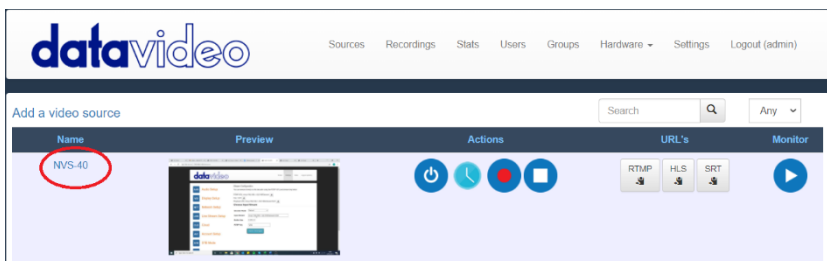


Select the 'Hardware Decoders' tab under 'Add your streaming destinations'

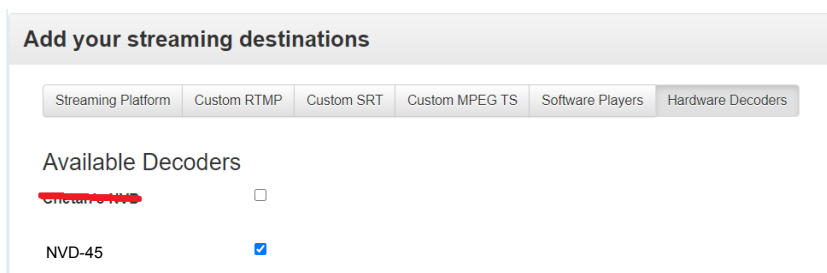

Select the check box next to the decoder you wish to link and then save the settings.

You will see the NVD-45 is now linked to the channel NVS-40 on the 'Decoders' page.

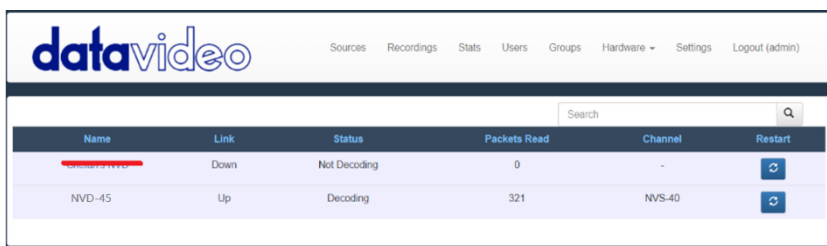

You can monitor the decoders status from the 'Stats' page.



SourcesRecordingsStatsUsersGroupsHardware ▾SettingsLogout (admin)

NVS-40

Video CodecH264

Width1280

Height720

Audio CodecAAC

Channels2

Input Data Rate1704.72kbps

<<

Studio One

 
 
FPS: 30

Automatic Firmware Updates

The NVD-45 features an automatic update system to avoid the need for the user to have to manually install firmware upgrades.

The NVD-45 will automatically check for updates whenever it is connected to the internet.

You will be notified if an update is available; a message will appear at the top of the interface. Simply click the 'Initiate Update' link to start the process, you can monitor the status of the update from the 'Stats' tab.



Datavideo NVD-45 Socket Commands

Using third party applications, users can easily connect to the NVD-45 using Telnet. To establish a connection with the NVD-45 simply open a Telnet connection to the NVD units IP address on port 23.

Please Note: Socket commands are disabled by default, to enable socket commands please check the appropriate option in the 'Network Tab'.

The NVD unit has three responses to commands:

FAILED: shows that the command could not be executed successfully.

OK: shows that the command is executed without any problem.

Invalid Command: shows that the command was not recognized.

The control commands are as follows:

Load [URL] An example of this command would be
Load "rtsp://192.168.1.1/stream1"
OK

Reboot Restarts the unit

Status Prints the current status
(Stream URL & Display information)


Port Forwarding on your firewall / router

So that an NVS-33/34/35/40 video stream can be seen on the internet (beyond the default gateway) certain network related 'ports' should be opened on your router or firewall. Your local network administrator or I.T. support should be able to help you with this.

Enable the "port forwarding" function or open below ports within the router settings.

Web Server/HLS	RTSP	RTMP
80	8554 (over TCP)	1935 (RTMP)
	8000 (over HTTP)	8080 (RTMPT)
	8080 (over HTTP)	8081 (RTMPS)

Dimensions

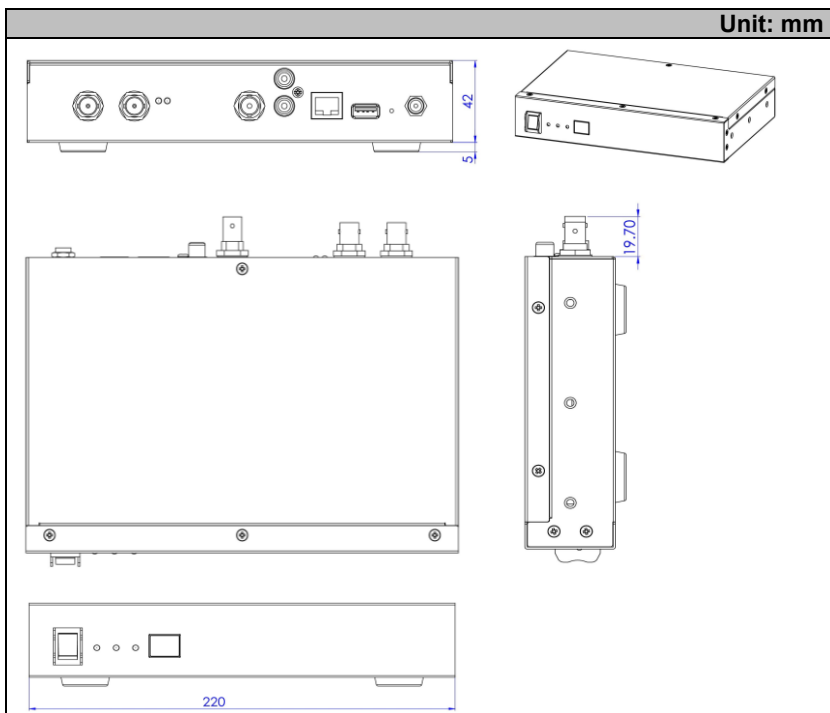

Specifications

Interface	
Audio/Video Input	RJ-45 Female (10/100M Ethernet) x 1 DHCP/Static IP
Video Output	12G-SDI x 2 (Digital) Composite x 1 (Analogue)
Audio Output	RCA (L/R) x 2 SDI embedded audio
Indicator	Power LED x 1, LAN LED x 2 (Active, Connection)
USB	1
IR Receiver	Yes
Reset Button	Yes
Power Supply	DC 12V
Standards	
Video Resolution	3840x2160p: 60/59.94/50/30/29.97/25/24/23.98 (H.265 Only) 1080p: 60/59.94/50/30/29.97/25/24/23.98 1080i: 60/59.94/50, 720p: 60/59.94/50
H.264/265 Max Bitrate	H.264: 40 Mbps H.265: 30 Mbps
Streaming Protocol	RTSP over UDP (Unicast / Multicast) RTSP over TCP RTSP over HTTP SRT (Secure Reliable Transport) caller MPEG-TS over UDP RTMP Pull RTMP Push (Internal Server) UDP raw (Unicast/Multicast) HLS over HTTP MPEG-TS over TCP Pull Supported video sharing websites

General	
Control	Web browser UI for configuration and control TCP/IP Socket commands
Update	Automatic firmware upgrade
Operating Temperature	0°C to 40°C (32°F to 104°F)
Storage Temperature	-20°C to 60°C (-4°F to 140°F)
Humidity	10% to 80% (non-condensing)
Power Consumption	12V / 13.7W
Dimensions (mm)	220 x 143.3 x 42
Weight	1.0 Kg

Service & Support

It is our goal to make your products ownership a satisfying experience. Our supporting staff is available to assist you in setting up and operating your system. Please refer to our web site www.datavideo.com for answers to common questions, support requests or contact your local office below.

Please visit our website for latest manual update.

<https://www.datavideo.com/product/NVD-45>



@DatavideoUSA @DatavideoIndia2016
@DatavideoEMEA @Datavideojapan
@DatavideoTaiwan @DatavideoLatam
@DatavideoAsia @DatavideoBrasil



@Datavideo
@Datavideo_EMEA
@Datavideo_Taiwan



@DatavideoUSA
@DVTWDVCN



@DatavideoUSA
@DatavideoEurope

All the trademarks are the properties of their respective owners.
Datavideo Technologies Co., Ltd. All rights reserved 2020

Apr-30-2026
Ver.: E5